

myhomefone™

Wireless DECT handset with SOS call function User Manual

Please read and retain this instruction manual.



myhomefone.com.au

Summary/contents

Getting started

Important safety instructions	3
Installing the main handset	4
Low battery warning	5
Battery performance	5
Package contents	6

Getting to know your phone

DECT phone buttons	7
DECT phone base	8
Handset display icons	8
DECT phone menu map	9

Using your DECT phone

Using the handset menu	10
Switch the handset on/off	10
Make a call	10
Preparatory dialing	10
End a call	10
Making an SOS call	10
Cancel an SOS call	10
Handsfree	10
Receiving calls	10
Dialing numbers quickly	10
Adjusting the earpiece volume	10
Mute the speakerphone	10
Call timer	10
Flash	10
Redial	10
Make a call from Phonebook	10
Copy a number to Phonebook	11
Speed dialing	11
Handset volume amplifier	11

Additional handsets and bases

Internal call	12
Make an internal call	12
Receive an internal call	12
Transfer an external call	12
3-Way call	12

Call log

View the call log	13
Copy a number / Delete a number / Delete all numbers	13
Call back incoming and outgoing numbers	13

Phonebook

To review Phonebook list	14
To add a Phonebook memory	14
To edit a contact	14
To delete a contact	14
To delete all contacts	14
Reviewing Phonebook memory status	14

Base Settings

Delete handset	15
Dial mode	15
Recall time	15
Modify base PIN code	15
PABX Number	15
Settings for communicator	15
Language	15
Internal/external ring	15
Vibrating	15
Audio setup	15

Default base to factory settings

16

Handset settings

Alarm	16
Ring setup	16
Key tone	16
Language	16
Auto answer	16
Date & time	17
Select base	17
Contrast	17
Handset default	17

SOS settings

Setting SOS Number	18
Making SOS call	18
Cancelling SOS call	18

Prior number

Setting prior number	19
----------------------	----

Add extra handsets to the base

19

Trouble shooting

20

Certification

21

Getting started

Important safety instructions

To reduce the risk of fire, electric shock and injury, always observe the following basic precautions when using your telephone:

- > This device is intended for indoor use only.
- > Observe all markings on the product.
- > Do not expose your device to moisture, and avoid contact with liquids.
- > To prevent electric shock, do not disassemble the handset or the telephone base.
- > Avoid placing any metal objects (clip, key, etc) between the battery contacts and charging contacts.
- > Your telephone may have a slight chance of being damaged by lightning. Unplug the telephone base from the mains during a thunderstorm.
- > Do not use the telephone in the vicinity of a gas leak.
- > Do not use the handset near any intensive care medical equipment. People with pacemakers should consult their doctor or cardiologist before using this telephone.
- > Clean your telephone with a dry, soft, lint-free cloth. Do not use any cleaning agents or solvents.
- > Exchanges between the telephone base and handset are carried out by radio signals, wearers of hearing aids may experience a small buzz.
- > Do not overload wall outlets and extension cords, as this may cause a fire or electric shock.
- > To disconnect all power from the system, unplug the power cord from the mains.
- > Observe the polarity indicated while installing the batteries.
- > It is dangerous to use other battery types or non-rechargeable batteries: they can cause interference and/or damage to the product. Daktel Australia Pty Ltd shall not be liable for any damages caused by non-compliance.
- > Do not immerse a battery in water and do not throw it in a fire.
- > The socket-outlet shall be installed near the equipment and shall be easily accessible.
- > If the device is not to be used for an extended period of time, please unplug the adapter in order to save electricity.
- > The external flexible cable of the adapter cannot be replaced. If the cord is destroyed, the adapter should be destroyed.
- > Your telephone may interfere with other electrical appliances such as an answering machine, television, radio, clock radio or computer when it is sufficiently close to such equipment. To avoid this, place the telephone base at least one meter away from other electrical appliances.

- > The receiver of the handset may attract small metal objects (staples, pins, etc). Be careful when placing the handset near these items.
- > Warning: Connecting this telephone to a digital PBX extension port may cause damage.

Caution

Please use the supplied power adapter only. Failure to observe the correct polarity or voltage of the adapter may cause damage to the telephone base.

Adapter for the telephone base: SW-075060AU

Input: 100-240V~ 50/60Hz 200mA

Output: DC 7.5V 600mA


Range of operation:

The maximum range separating the handset from the base is 300 meters (without obstacles) or 50 meters with obstacles. Thick concrete walls will reduce the transmission range.

Installing the main handset


Should you have any questions regarding the installation of this product, please call us at 1300 031 107.

The telephone base should be placed at least 1 meter away from other electrical appliances in order to avoid interference. The handset exchanges radio signals with the telephone base. The strength of these signals depends on the position of the base. You can obtain a stronger signal by placing the base higher.

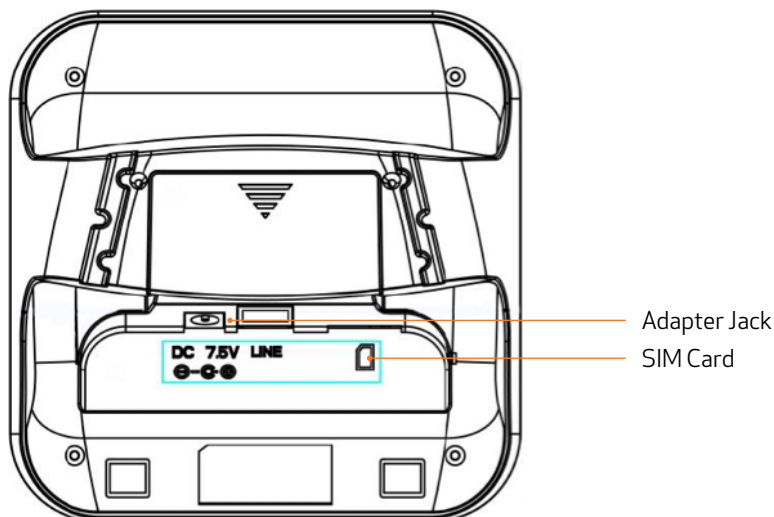

1. Insert the plug of the supplied power adapter to the bottom of the telephone base and the other end into an electrical outlet.
2. Your SIM card should already be inserted into the base unit, as delivered.
3. Remove the plastic battery tab from the base station.
4. The phone will be ready to use; however, it will need to remain on the base station until fully charged. **This may take several hours.**

Low battery warning

When the battery is very low,  flashes on the handset screen and a warning beep will sound every minute to prompt you to recharge the battery.

Battery performance

When fully charged, the batteries offer approximately 4 hours of standby time under ideal conditions. Please note that a new battery reaches its full capacity after several days of normal use.

The battery capacity decreases over time, reducing the talk time and standby time. Replace the batteries if necessary.

The batteries and the handset will become hot during charging. This is normal.

Tip

When you are not using your handset, place it on the charger so that you can always have fully charged batteries.

Warning

DO NOT USE STANDARD OR ALKALINE BATTERIES. THEY MAY EXPLODE AND CAUSE INJURY. ONLY USE RECHARGEABLE NI-MH BATTERIES AS INDICATED IN THIS USER MANUAL.

- > Do not throw a battery into a fire.
- > Do not open or damage batteries. Electrolytes are corrosive and can cause irritation to eyes and skin. It is also toxic and must not be swallowed.
- > If you must handle the batteries, keep them from coming into contact with metal objects. This may cause short circuiting or overheating and you may burn yourself.
- > Do not attempt to recharge the batteries by heating. The battery electrolytes may leak, and may irritate your eyes or skin.
- > Observe the polarity indicated. Reversing the polarity of the battery may result in electrolyte leakage and explosion.
- > Remove the batteries if you do not intend to use your phone for several months.
- > Do not use any other telephone base for charging the handset – the batteries can be damaged.




Warning: Danger of explosion if batteries are incorrectly installed.

Use only Li-ion battery. The autonomy for the handsets indicated is based on the original capacity of the batteries. Dispose of used batteries according to the instructions of your local authorities.

Package contents

Wireless DECT phone base	1
Cordless handset	1
AC adapter	1
Telephone cable	1
User manual	1
Li-ion battery 3.7V (800mAh)	1
Rechargeable 1.2V Ni-MH battery (600mAh)	4

 Getting to know your phone

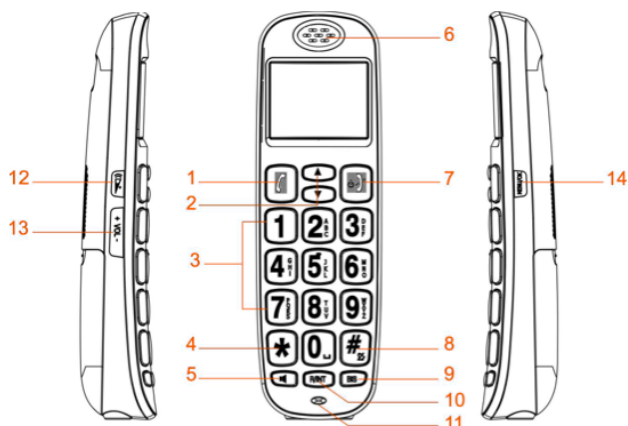

1. Talk
2. Phonebook / volume +/-
3. Numeric keys
4. * Key
5. Handsfree
6. Speaker
7. End/on/off key
8. # Key
9. Redial
10. Flash/delete/intercom
11. Microphone
12. Handset amplifier
13. Volume +/-
14. Menu/ok/mute

1. Talk

Press to dial or answer a call.

2. Phonebook / volume +/-

In standby mode, press to enter the Phonebook.

Use to increase/decrease the ringtone/earpiece/speaker volume.

Scroll up/down through menu options, call lists and Phonebook entries.

3. Numeric keys

Press to enter a number/character.

4. * Key

Enter * sign or press to establish a three-way conversation.

5. Handsfree

Press this key to talk in handsfree mode.

6. Speaker

7. End/on/off key

Press to end calls. Also allows cancelling an emergency call.

Press and hold to switch the handset on/off.

When viewing the redial/call lists or when editing, press to return to previous menu.

8. # Key

Enter a # sign or long press to mute the ringtone.

9. Bis-redial number

Press (pic of green phone) and BIS key, the last dialed number will be dialed.

10. Flash/delete/intercom

Press this key to use special functions provided by your telephone service provider such as call waiting and call forwarding.

In enter/edit mode, press to delete characters and digits.

Use to make internal calls or transfer calls to other handsets registered, or establish a three-way call.

11. Microphone

12. Handset amplifier

Use to enlarge the handset volume by 40dB during a call conversation.

13. Volume +/-

Use to increase the ringtone/earpiece/speaker volume.


14. Menu/ok/mute

Press to open the menu.

Press to select menu options and to confirm a displayed option.

During a call, press this key to switch Mute on/off. When muted, your caller cannot hear your voice.

DECT phone base

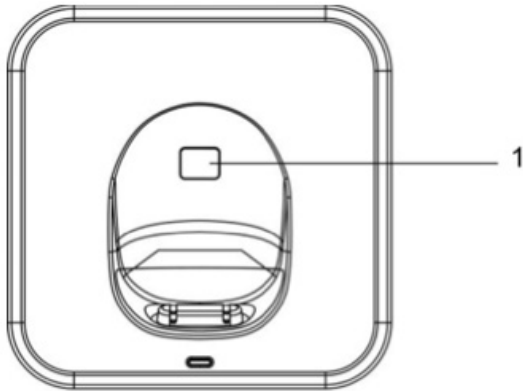











1. Page

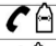
Press this key to find handset/communicator.

Press and hold this key for 5 seconds for registration.

Handset display icons

	Indicates the signal strength. Flashes when handset is not registered to the base or if you go out of range.
	Displays when making an external call.
	Displays when making an internal call.
	Displays when having an external call under handsfree mode.
	Displays when having an internal call under handsfree mode.
	Displays when an alarm clock is set.
	Displays when external ring set to off.
	Battery is fully charged.
	Battery is almost empty.
	Battery is empty.

If the LCD display shows as below in standby mode:

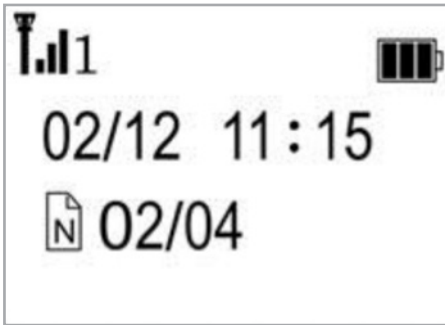


The digit «1» next to the signal bar indicates the handset number. For example, if there are 3 handsets connected to this base, each handset will be allocated a different number from 1 to 3.

02/12 is the day and month number. 11:15 indicates the time.

The two digits shown after the N symbol indicate the number of missed/received calls. In the above example, “02” indicates the number of missed calls and “04” the total number of calls received.

 DECT phone menu map

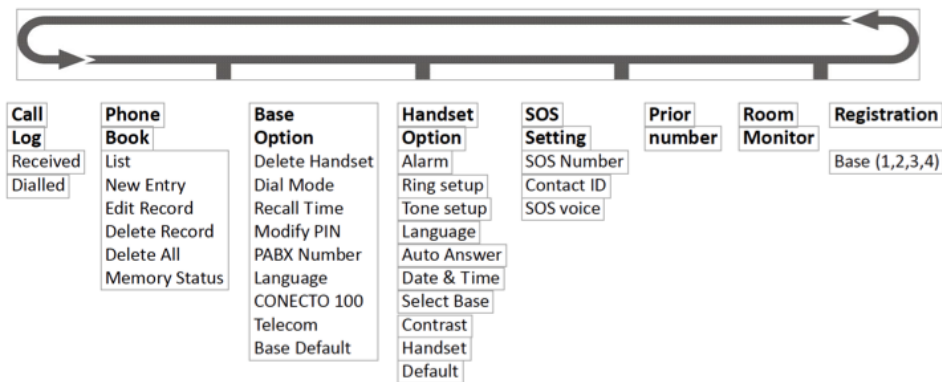

Using your DECT phone

Using the handset menu

Press MENU/OK key to open the menu.

Press ▲/▼ key to scroll the menu option.

Press MENU/OK button to confirm menu selection or the setting displayed.

Press (red phone) button to return to previous menu.

Switch the handset on/off

1. When your handset is off, press and hold (red phone) key for 4 seconds or just put the handset back on the base unit.
2. To switch off the handset, press and hold (red phone) key until the screen turns off.

Make a call

1. Press (green phone), and the screen display shows (black phone). When you hear the dial tone, dial the phone number. Or press (green speaker) and dial a number to make a call in handsfree mode.

Preparatory dialing

Enter the phone number first. The number is shown on the display. If you make a mistake, press R/INT key to delete a digit. Press (green phone) to dial the number.

End a call

Place the handset back on the base or press (red phone) to end the call.

Making an SOS call

Press the SOS key, the SOS call would be dialed automatically.

Note: Please preset the SOS numbers in handset before making SOS call.

Cancel an SOS call

Press and hold (red phone) or the SOS key for 2 seconds to cancel a SOS call.

Handsfree

Handset: Press (green speaker) each time you wish to switch between handset and handsfree mode.

Receiving calls

When the phone rings, simply lift the handset to answer the call.

Note: If you would rather press (green speaker) after lifting the handset to receive a call, you will need to switch Auto answer to OFF under handset menu option.

Dialing numbers quickly

Numbers can also be dialed directly from the Phonebook, the calls list and redial list.

Adjusting the earpiece volume

1. During a call, press ▲/▼ key or +VOL – key on left side to increase or decrease the handset volume.

Mute the speakerphone

You can 'Mute' your handset to stop the caller from hearing you while you talk to someone else close by.

1. During a call, press MENU/OK. The handset microphone is muted and the display shows Call Muted.
2. Press MENU/OK again to resume your call.

Call timer

After the first 6 seconds of your call, the talking time is displayed.

Flash

During a call, press R/INT and dial the extension number to transfer the call.

Redial

1. Press (green phone) or (green speaker).
2. Press BIS key, the last dialed number will be dialed.

Make a call from Phonebook

1. In standby mode, press ▲/▼ key and scroll ▲/▼ key through the phone list to the desired entry.
2. Press the (green phone) or (green speaker) key to dial the number.

Copy a number to Phonebook

1. Press MENU/OK and select Call Log.
2. When the desired number is showing, press MENU/OK key. The display shows "ADD TO PB?, Delete, Delete all". Select ADD To PB and press MENU/OK. Use the keypad to enter the name (press R/INT to delete any wrong entry). Press MENU/OK to confirm.
3. Edit the number if necessary, and then press MENU/OK key. Melody is displayed.
4. Scroll ▲/▼ key to select a normal or a VIP ringtone. And then press MENU/OK to confirm. The entry is stored.

Speed dialing

1. In standby mode, enter a phone number. Press the MENU/OK key.
2. The display shows "Top Number?". Press numeric keys from 1 to 9 to set a speed dialing number. There is a confirmation sound from the handset.
3. To make a speed dial call, press and hold the preset number for 1.5 seconds. The corresponding phone number will appear on the screen and the handset starts to call it in handsfree mode.
4. To delete a number from the speed dial list, press key twice and then the MENU/OK key. The display shows "Top Number?". Enter the number you want to delete (1-9). There is a confirmation sound from the handset.
5. To cancel the call, press the (red phone) key.

Handset volume amplifier

1. During a call, press (Speaker volume icon) once to increase the earpiece volume to 40dB.
2. To return to previous volume during the same call, press (Speaker volume icon) key again. The handset volume will return to the previous volume level if there is a new call.

Additional handsets and bases

Up to 5 handsets can be registered and operated from the base. Each handset can be registered with up to 4 bases.

If you buy a new handset to use with your base they will have to be registered to the base before you use them.

Internal call

- > If you have more than one handset registered to your base, you can:
- > Make internal calls between handsets.
- > Transfer an external call from one handset to another.
- > Hold a conference call between two internal handsets and an external call.
- > Make an internal call between two handsets while a third is on an external call.

Make an internal call

In standby mode, long press R/INT key then enter the handset number (1-5) you want.

Note: If the base has only one cordless handset registered, it will immediately start calling that handset.

Receive an internal call

Pick up the handset or press the (green phone) Key to answer the call.

Transfer an external call

You can transfer an external call to another handset registered to your base.

1. During an external call, long press R/INT key for 2 seconds. You caller is put on hold.
2. Enter the number of the handset you want to transfer the call to.
3. If the other handset user does not answer:
4. You can reconnect to your external caller by a long press of the R/INT key for 2 seconds. Or, if the other handset user does not answer after 30 seconds you will be automatically reconnected to your external caller. When the other handset answers:
5. Put the handset back on the base or press (red phone) key on handset when the other handset answers.

3-Way call

You can hold a three-way conversation between an external caller and another handset user.

1. During an external call, long press R/INT key. You caller is put on hold.
2. Enter the handset number you want to invite. If the base has only one cordless handset registered, it will immediately start calling that handset.
3. When the second handset answers, press the (star) key to connect all three callers. If the other handset does not answer, press the R/INT key for 2 seconds to return to you external caller.
4. Put back the handset or press (red phone) key to quit the party conference and other 2 parties can also continue communication.

Call log

Caller Display shows who is calling and if the caller's number matches an entry stored in the Phonebook.

To use Caller Display you must first subscribe to your network provider's caller Display service.

The call log stores details of the received and dialed calls. When the call list is full, the most recent calls received automatically replace the oldest calls.

View the call log

1. Press MENU/OK key. The display shows CALL LOG on the top. Press MENU/OK key again. You will find Received and Dialed. The LCD will show the last record.
2. (If no entry is available, the LCD display shows Empty)
3. Press ▲/▼ key to view other record.

Copy a number / Delete a number / Delete all numbers

When viewing the call list, you can press MENU/OK key and scroll ▲/▼ to copy a phone to Phonebook, delete a number or all numbers from the call list.

Call back incoming and outgoing numbers

1. Press MENU/OK and select CALL LOG.
2. When the desired number is shown, press (green phone) key to dial the number.

Phonebook

You can store up to 150 name and number entries on each handset registered to your base. Each name can be up to 12 characters long and each number up to 20 digits long.

To review Phonebook list

1. Press MENU/OK key. Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm. List is showed at the top.
2. Press MENU/OK key and ▲/▼ key to view the Phonebook list, or search alphabetically by entering the first letter of the name. The first name that starts with this letter or the nearest letter in the alphabet will be displayed.

To add a Phonebook memory

1. Press MENU/OK key. Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm.
2. Scroll ▲/▼ key to New Entry. Press MENU/OK key.
3. The cursor for the name flashes. Use the keypad to enter the name and press R/INT key to delete any wrong entry. Press MENU/OK key to confirm the name.
4. Use the keypad to enter the phone number and press MENU/OK key.
5. The display shows Melody, press ▲/▼ to select normal or VIP ringtone.
6. Press MENU/OK key to confirm. New Entry is displayed. You can now enter your next name and number.

To edit a contact

1. Press MENU/OK key. Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm.
2. Scroll ▲/▼ key to Edit Record. Press MENU/OK key.
3. Scroll ▲/▼ key to select the desired record. Press MENU/OK key.
4. Press R/INT key to delete the name if needed, enter new name and press MENU/OK key.
5. Edit the phone number and melody in the same way, and MENU/OK key to confirm.

To delete a contact

1. Press MENU/OK key. Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm.
2. Scroll ▲/▼ key to DEL Record, press MENU/OK key to enter.
3. Scroll ▲/▼ key to review through the list until you see the contact you want to delete.
4. Press MENU/OK key and the display will show "Confirm?". Press MENU/OK again to confirm.

To delete all contacts

1. Press MENU/OK key. Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm.
2. Scroll ▲/▼ key to Delete All, then press MENU/OK key to enter, and the display will show "Confirm?".
3. Press MENU/OK again to confirm. All contacts in your Phonebook will be deleted.

Reviewing Phonebook memory status

1. Press MENU/OK key, Scroll ▲/▼ to Phonebook. Press MENU/OK key to confirm.
2. Scroll ▲/▼ key to MEM Status. Press MENU/OK key to enter. Then the LCD will show the Phonebook memory space available, e.g. if you have saved 30 names and numbers in your Phonebook, it would display 30/150. 150 indicates the total memory, i.e. a total of 150 contacts can be saved in this handset.

base Settings

Delete handset

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key, the display shows Delete HS on the top.
3. Press MENU/OK key and use keypad to enter the PIN code (default 0000).
4. Press MENU/OK key. Scroll ▲/▼ key to select the handsets that registered to the base and select the one you want to delete.
5. Press MENU/OK key to confirm. The handset will be deleted from the registered list.

Dial mode

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key, scroll ▲/▼ key to Dial Mode.
3. Press MENU/OK key. Scroll ▲/▼ key to Tone or Pulse. Press MENU/OK key to confirm.

Recall time

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to Flash Time.
3. Press MENU/OK key. Scroll ▲/▼ key to select the desired recall time among 100ms, 300ms and 600ms. Press MENU/OK key to confirm.

Modify base PIN code

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key, scroll ▲/▼ key to Modify PIN.
3. Press MENU/OK key, the display shows "PIN Code?".
4. Use the keypad to enter the current PIN code and press MENU/OK to confirm.
5. If the old code is valid, the display shows New PIN, enter a new PIN code (4 digits), press MENU/OK to confirm. Then the display shows "Repeat:". Enter the new PIN code again.
6. Press MENU/OK to confirm. The code will be stored to the base and a tone sounded.

Note: The default PIN is 0000.

PABX Number

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to PABX Number.
3. Press MENU/OK key. The screen shows "Number ?" Use the keypad to enter the PABX number and press MENU/OK key to confirm.

Note: After the PABX Number is set, the outgoing call would be added with the PABX Number automatically. If PABX Number is not necessary, please do not set it.

Settings for communicator

Note: This menu is only used when there is communicator registered to the base. The standard myhomefone™ package does not include a communicator, if you would like more information please visit myhomefone.com.au

Language

This language menu is for the communicator low battery voice announcement and SOS call. There are 2 languages for selection: language 1 is French, and language 2 is Spanish.

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to Language.
3. Press MENU/OK key. Scroll ▲/▼ key to select Language 1 or 2.

Internal/external ring

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to PP setup.
3. Press MENU/OK key and select the communicator you want to change the settings.
4. Select INT Ring or EXT Ring. Press MENU/OK key. Then you can select the ringtone and adjust the volume for the internal/external call.

Vibrating

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to PP Setup.
3. Press MENU/OK key and select the communicator you want to change the settings.
4. Select Vibrating. Then you can set the vibration on or off.

Audio Setup

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key. Scroll ▲/▼ key to PP Setup.
3. Press MENU/OK key and select the communicator you want to change the settings.
4. Select Audio Setup. Press MENU/OK key and scroll ▲/▼ key to adjust the speaker volume of communicator.

Defaulting base to factory settings

1. Press MENU/OK key. Scroll ▲/▼ key to base option.
2. Press MENU/OK key, scroll ▲/▼ key to BS Default.
3. The display shows "PIN Code?"; enter the PIN code (default 0000) and press MENU/OK key to confirm.
4. If the PIN code is valid, all base settings will be returned to the factory default.

Note: The Phonebook memory will not be erased.

Handset settings

Alarm

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key and select Alarm.
3. Scroll ▲/▼ key to select ON or OFF. If you select ON, the display shows 00:00. Use the numeric keypad to set the time.
4. Press MENU/OK key. Scroll ▲/▼ key select to SNOOZE ON or SNOOZE OFF. Then the icon (black bell icon) is showed when return to standby mode.

Note: When the alarm sounds, press any key except (red phone) to intermit it, or press (red phone) to stop it. If you want to cancel alarm, go to Handset Opt. then Alarm and choose OFF.

Ring setup

You can choose from 11 melodies for internal/external call of handset and 5 volume levels or set it off. For VIP calls, there are 2 melodies for selection.

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Ring Setup.
3. Press MENU/OK key. Scroll ▲/▼ key to select INT Ring, EXT Ring or VIP Ring.
4. Press MENU/OK key. Scroll ▲/▼ key to select the Melody and Volume.
 1. If you select Melody: Press MENU/OK key to confirm. Scroll ▲/▼ key to select desired melody. Press MENU/OK key to confirm.
 2. If you select Volume: Press MENU/OK key to confirm. Scroll ▲/▼ key to select desired ringer volume level from 1 to 5. The icon will show if the volume is set to OFF. Press MENU/OK key to confirm.

Note: If you set ring to OFF for external calls, there will be a ringing off icon displayed on screen. When there is an incoming call, the handset will not ring.

Key tone

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Tone Setup.
3. Press MENU/OK key. Scroll ▲/▼ key to select Key Tone, Battery Low or Out Of Range.
4. Press MENU/OK key. Scroll ▲/▼ key to select the ON or OFF for each option.
5. Press MENU/OK key to confirm.

Language

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Language.
3. Press MENU/OK key. Press ▲/▼ key to select the language you want. Press MENU/OK key to confirm.

Auto answer

Your phone is set to answer calls by lifting the handset off the base unit. You can switch this feature off so that calls always have to be answered by pressing (green phone icon).

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Auto Answer.
3. Press MENU/OK key. Scroll ▲/▼ key to select ON or OFF. Press MENU/OK key to confirm.

Date & time

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Date & Time.
3. Press MENU/OK key. Scroll ▲/▼ key to select Time Setting, Date Format and Time Format. Edit the year, month, date and time by using the numeric keypad. Press MENU/OK key to confirm.

Note: The date and time will be automatically set when the first caller ID message is received.

Select base

If a handset is registered to more than one base, you can select the base with which the handset works.

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Select base.
3. Press MENU/OK key. The display shows BASE 1, 2, 3, 4. Scroll ▲/▼ key to select base (BASE 1~4) or AUTO.
4. Press MENU/OK key. If there is another base available, the display will show Searching. After a few seconds, there is a confirmation sound from the handset and it returns to standby. There would be an icon ✓ after the base number.
5. If no base nearby, it will make an audible sound and stay on the original menu.

Contrast

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to Contrast.
3. Press MENU/OK key. Scroll ▲/▼ key to select between levels 1 to 8.

Handset default

1. Press MENU/OK key. Scroll ▲/▼ key to Handset Opt.
2. Press MENU/OK key. Scroll ▲/▼ key to HS Default.
3. Press MENU/OK key. The display shows PIN Code? Enter the PIN code (default 0000) and press MENU/OK key to confirm.

Note: Phonebook record will not be deleted.

SOS settings

By simply pressing the SOS button on the back of the handset, you can immediately alert up to eight family members and/or friends that you need help. Once an SOS call is activated, the handset is locked from all other operations.

Important note: DO NOT register emergency services as your SOS numbers (i.e. hospital, fire service). Instead, register your family members, carer or friends, or your professional monitoring centre (if applicable). If the SOS function is activated accidentally, and emergency services are dispatched, Daktel Australia Pty Ltd will not be liable for any potential charges.

Setting SOS Number

1. Press MENU/OK key. Scroll ▲/▼ key to SOS Setting.
2. The display shows "PIN code?". Enter the PIN code (default 0000) and press MENU/OK key to confirm.
3. Select SOS number and press MENU/OK key. The display shows Number 1. Press MENU/OK key and enter the SOS number by using the numeric keypad. Press MENU/OK key again. Scroll ▲/▼ key to add other SOS numbers. There is a total of 6 SOS numbers that can be set.
4. To delete an SOS number, press MENU/OK key and use the R/INT key to delete the numbers. Press the MENU/OK key to confirm.

Making SOS call

1. Press the SOS button on the back of the handset.
2. Once the SOS key is pressed, the handset display will show that you are in SOS call.
3. SOS call will announce your emergency to the preset SOS numbers. The called party needs to answer the call in 30 seconds and enter the number 5 as prompted. Once the SOS call is answered, the speakerphone mode will be activated for handset.
4. If the SOS call is not answered, it will make a total of 3 attempts to each registered SOS number.
5. Once an SOS call is finished, the called party ends the call and the handset will disconnect automatically after 8 seconds.

Cancelling SOS call

If you press the SOS key unintentionally, to cancel it press and hold the SOS key for 2 seconds on handset.

Prior number

myhomefone™ can be set to automatically answer calls from up to 5 priority numbers. You will need to enter the PIN code (default 0000) before setting these numbers.


Setting prior number

1. Press MENU/OK key. Scroll ▲/▼ key to Prior Number.
2. Press MENU/OK key. The display shows PIN Code?
3. Enter the PIN Code (default 0000) by using the keypad and press MENU/OK key to confirm.
4. The display shows Number 1. Press MENU/OK key and enter the phone number with the keypad. Use R/INT key to delete any wrong entry. Press MENU/OK key to confirm.

Add extra handsets to the base

Registration is the process to link a new handset/communicator to the base. A maximum of 5 handsets/communicators can be associated with this base. This base is compatible with the myhomefone™ handset and other GAP-compatible handsets. Handset/communicator battery must be fully charged and you must be close to the base for registration. Note: The handset supplied in this package is already registered.

1. At the base: Press and hold the PAGE button for 5-6 seconds till the red LED starts flashing.

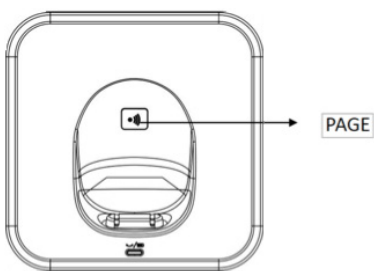

2. At the handset: Press MENU/OK key. Scroll ▲/▼ key to select Registration. Press MENU/OK key and select the base. Press MENU/OK key and enter the PIN code (default 0000). Press MENU/OK key again. The handset will start to look for the base and the display will show Searching X. For successful registration a confirmation tone will be heard from the handset and an antenna mark appears, with the handset number for internal call use (icon appears at the top left of the display).
3. Once the handset is registered to the base successfully, it will start to ring if you press the PAGE button on base.

Trouble shooting

Should you have any questions regarding the installation of this product, please call our support team on **1300 031 107**.

No signal icon displayed on the display

The handset is out of range. Move it closer to the base.

No dial tone

Check your SIM card is installed correctly in the base.
The handset is out of range. Move it closer to the base.

No docking tone

The handset is not placed properly on the base / charger.
The charging contacts are dirty. Disconnect the power adapter first and clean the contact with a damp cloth.

The handset on the base does not charge

Make sure the battery in the handset is inserted correctly.
Make sure the handset is placed properly on the base / charger.
The charging contacts are dirty. Disconnect the power adapter first and clean the contact with a damp cloth.
Batteries are defective. Contact us for resolution.

No display

Make sure the battery is charged.
Make sure there is power input and the phone is connected.

The handset doesn't ring

Make sure it is not on mute.
Make sure the handset ringtone is turned on.

LCD becomes dim

Adjust LCD contrast, if the LCD is still dim, charge the Li-ion battery.

Can't make an SOS call

Check if the SOS numbers are set.
Check if the handset is registered to base or not.

Can't cancel an SOS call

Press and hold the SOS key for 2 seconds.
Keep the SOS Voice prompt option activated (it is activated by default) so that the emergency call procedure can be automatically terminated after the first person has responded to the call.

Note: If none of the above suggestions solve your problems, try unplugging the telephone base from the mains and removing the batteries from all handsets. Wait 15 minutes and then reconnect everything.

Certification

myhomefone™ complies with the essential requirements and other provisions of Directive 1995/5/EC.

myhomefone™ has been tested by Austest Laboratories to comply with the following certifications:

- > EN 55032:2015 (Class B).
- > Radiocommunications (Digital Cordless Communication Devices-DECT Devices) Standard 2007.
- > Australian Standard AS/CA S042.1:2015 – Requirements for Connection to an Air Interface of a Telecommunications Network – Part 1: General).
- > Australian Standard AS/CA S042.4:2015 – Requirements for Connection to an Air Interface of a Telecommunications Network – Part 4: IMT Customer Equipment).
- > Radiocommunications (Electromagnetic Radiation – Human Exposure) Standard 2014.
- > Australia/New Zealand Standard AS/NZS 60950.1:2015 Information Technology Equipment – Safety – Part 1: General Requirements).



CE 0700

myhomefone™